

Veito SPACE / SPACE S — Инструкция по установке и эксплуатации

SPACE S / SPACE


INSTALLATION & INSTRUCTIONS MANUAL

INSTALLATIONS- & BENUTZERHANDBUCH

MANUEL D'INSTALLATION ET D'INSTRUCTIONS

MANUAL DE INSTALACIÓN E INSTRUCCIONES

veito

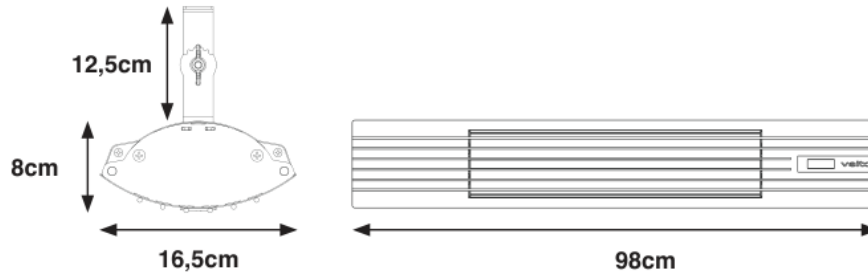

PRODUCT FEATURES

The SPACE carbon infrared heater is engineered as a robust outdoor heater. Every component in the SPACE heater is optimized for performance. That includes the veitco carbon infrared tube producing mid-wave infrared heat. The SPACE heater has weatherproof design, which means you can use it for patios, terraces, smoking areas, conservatories, restaurants, hotels, garages, workshops, factories, warehouses and many more.

PRODUCT SPECIFICATIONS

MODEL	SPACE S	SPACE
VOLTAGE	220-240V 50/60Hz	220-240V 50/60Hz
POWER	2500W	2000W
IP RATING	IP44	IP44
WEIGHT	4KG	4KG

INSTALLATION

Installation must be carried out by a licensed and authorised person only.

Never attempt to carry out an installation while the electrical power is switched on.

Remove all protective plastic from the heater before installation.

Ensure that you refer to the installation precautions under **IMPORTANT SAFETY INSTRUCTIONS** before starting to mount the heater.

Only connect the appliance to a power supply that conforms to the specification stated on rating plate.

For installation use only the supplied accessories or original accessories approved by the manufacturer.

This heater must be installed according to the minimum installation clearances shown in the diagrams.

A minimum safety distance of 150cm should always be left in front of the appliance.

This heater must be mounted at a minimum of 180cm above the floor.

The heater should always have a minimum clearance of 50cm from a ceiling and adjacent walls.


Mark and drill the mounting holes on the wall. Attach the mounting bracket to the wall.



Bring the heater up to mounting bracket. Insert M6 bolts in the slots on the bracket. Lock into position with M6 nuts.

Rotate the heater to require angle and lock into position with the bolt and nut on the wall bracket.


Do not position the heater on the wall at an angle of less than 45°.

Do not place articles on or against this appliance.

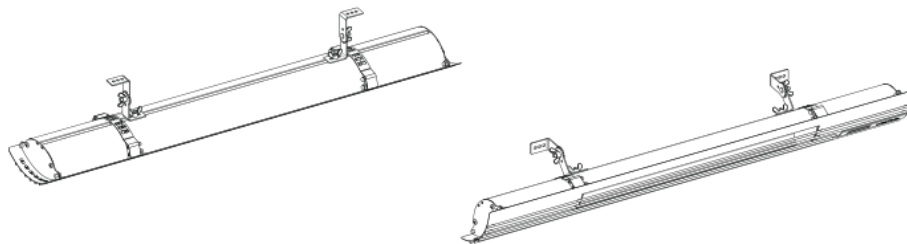


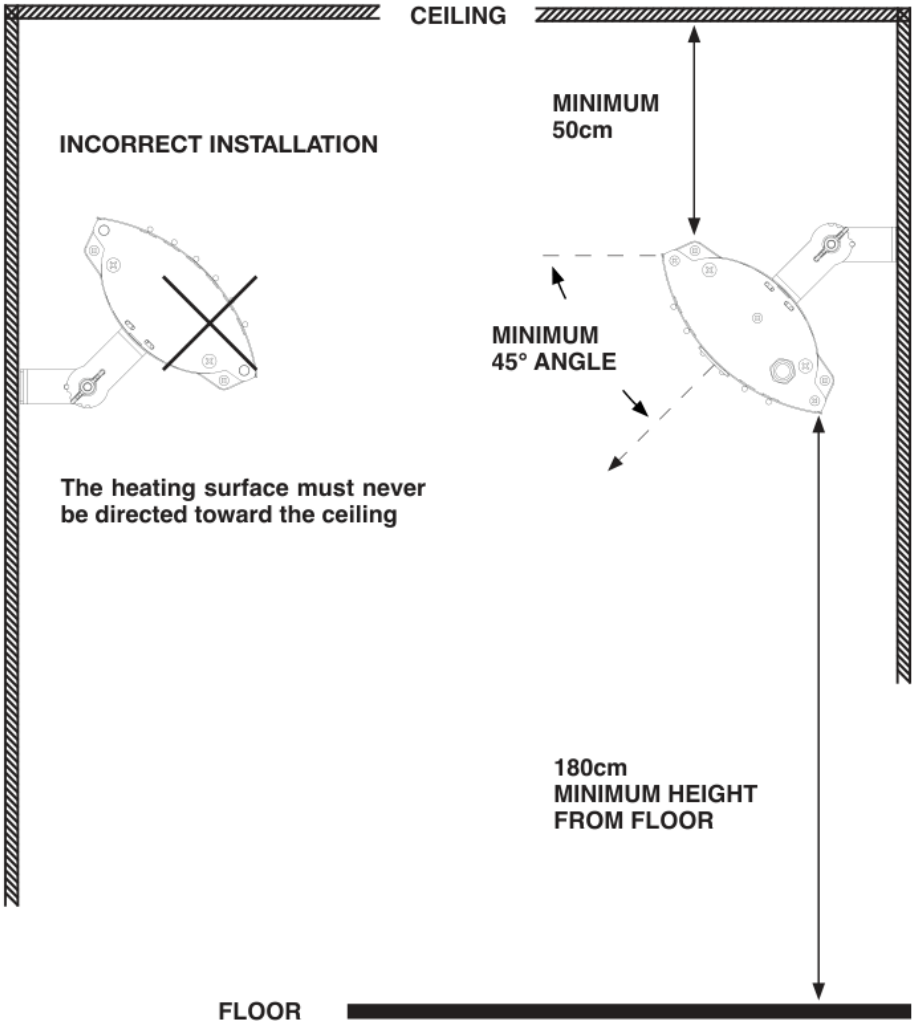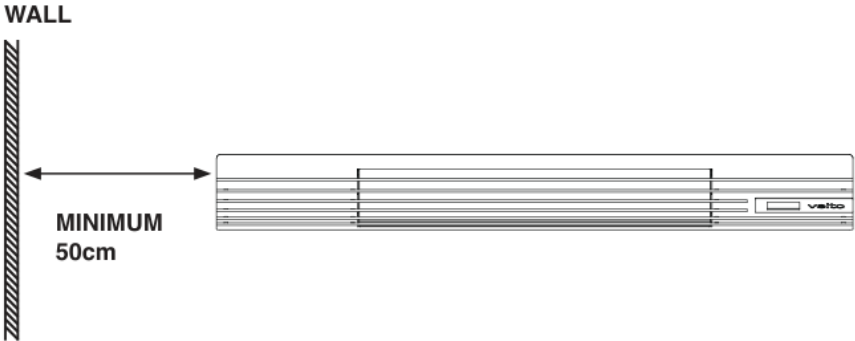

INCORRECT INSTALLATION

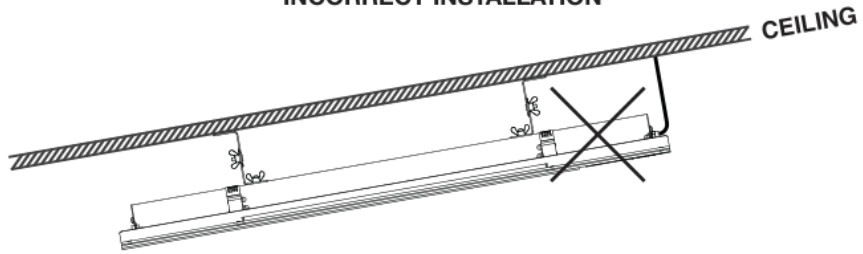


CORRECT INSTALLATION

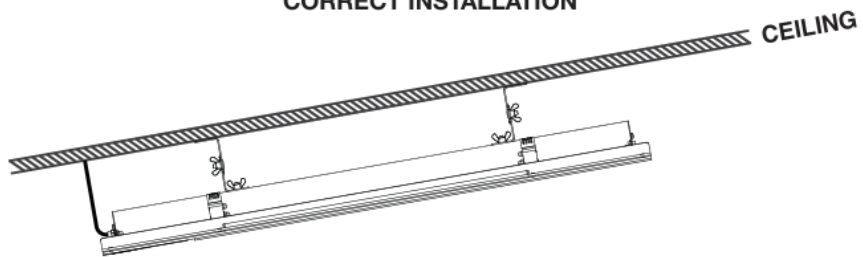

The supply cable must be at the lower end of the heater if the heater is installed at an angle or vertically.

WIRING DIAGRAM

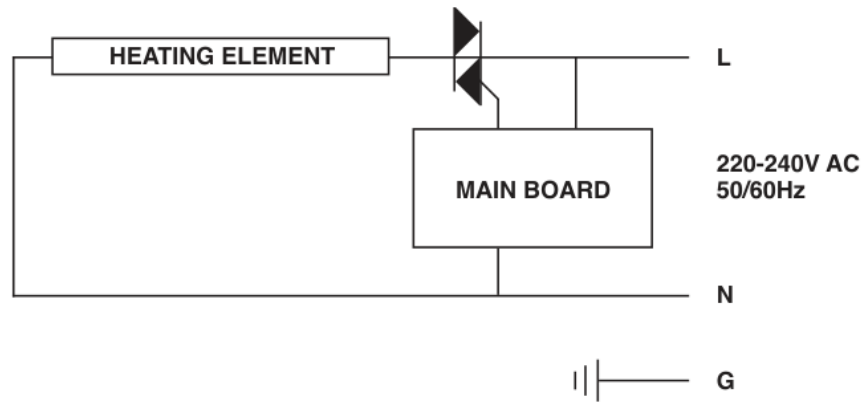

Важные меры безопасности

- Перед использованием внимательно прочитайте инструкцию.
- Обогреватель сильно нагревается во время работы. Не прикасайтесь к горячим поверхностям.
- Держите мебель, шторы, бумагу и другие горючие материалы минимум в 150 см от прибора.
- Не используйте прибор рядом с ванной, душем или бассейном.
- Монтаж должен выполнять только квалифицированный специалист.
- Не накрывайте обогреватель во время работы.
- Перед обслуживанием отключите прибор от сети и дайте ему полностью остыть.
- Не допускайте попадания воды внутрь корпуса и пульта управления.
- Используйте только заземлённую розетку 220–240 В.

Описание устройства

- Инфракрасный карбоновый обогреватель Veito SPACE предназначен для использования на террасах, верандах, в ресторанах, мастерских, гаражах и других помещениях.
- Прибор защищён от влаги по стандарту IP44.
- Модель SPACE S — 2500 Вт.
- Модель SPACE — 2000 Вт.
- Вес устройства — 4 кг.

Монтаж

- Минимальная высота установки — 180 см от пола.
- Минимальное расстояние до потолка и стен — 50 см.
- Минимальный угол наклона — 45°.
- Не направляйте нагревательную поверхность в потолок.
- Используйте только оригинальные крепления из комплекта.

Управление

- Кнопка HIGH — включение высокой мощности.
- Кнопка LOW — включение низкой мощности.
- Кнопка температуры — установка желаемой температуры.
- Таймер: 1–9 часов или выключение.
- После окончания времени таймера прибор выключается автоматически.

Замена батареек пульта

- Используются две батарейки AAA.
- Соблюдайте полярность «+» и «-».
- Не допускайте попадания влаги в пульт.

Очистка и обслуживание

- Перед чисткой отключите прибор и подождите минимум 30 минут.
- Для очистки используйте мягкую влажную ткань.
- Не используйте абразивные или агрессивные чистящие средства.
- При повреждении кабеля обратитесь в сервисный центр.